GAMBER JOHNSON®

Very Well Connected™

INSTALLATION INSTRUCTIONS

Product	Revision	Form
7160-0380	A	INST-546
Chevorlet Caprice Trunk Shelf, 2011+		**Printing Spec:** PS-001

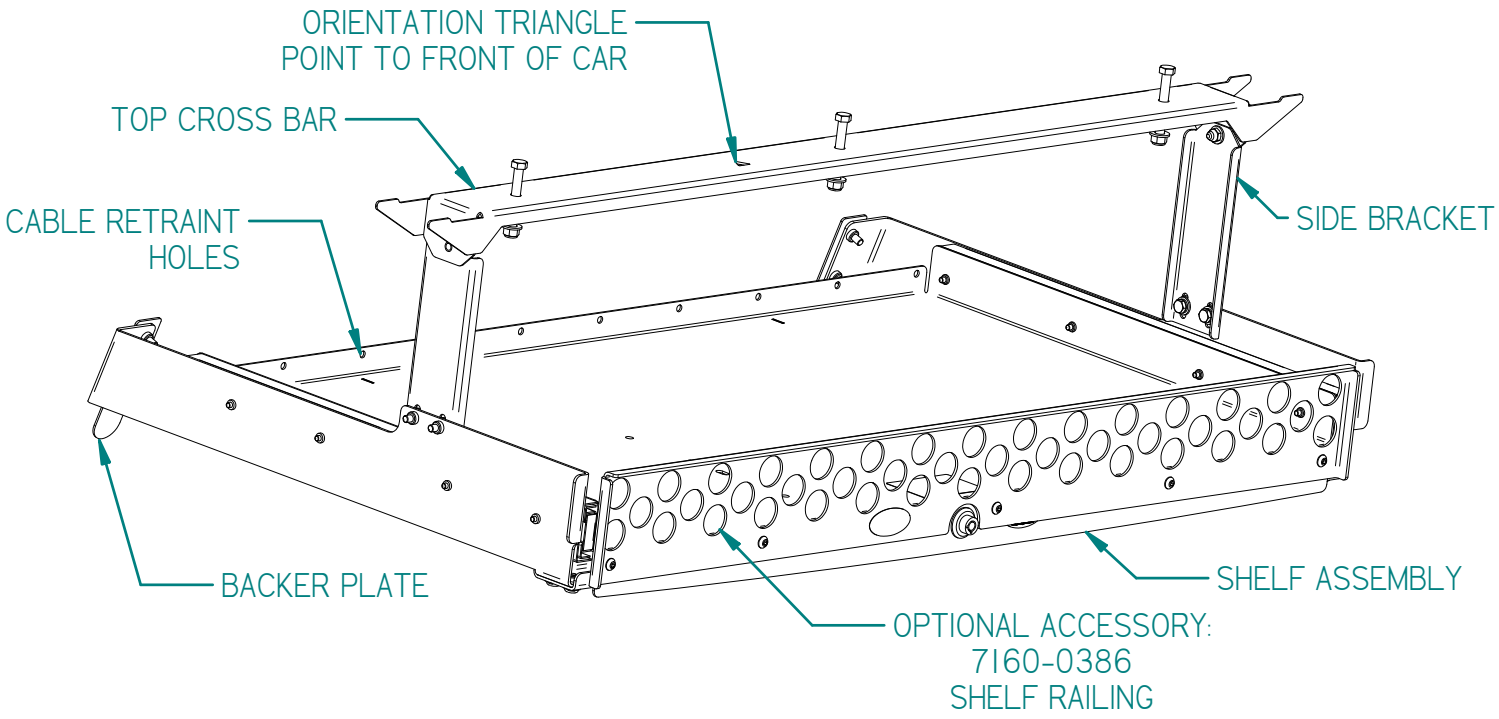

Vehicle Disassembly:

1. Replace child seat anchor bolts with 2-1/4" bolts provided in hardware bag. Reuse stock lock washer, spacer and child seat anchor (Fig. 1).
2. Remove rear seat cushions
   a. Pull up on front of bottom seat cushion to release from clips
   b. Remove bottom seat cushion
   c. Remove four (4) 1/2" nuts retaining back rest cushion
   d. Lift back seat cushion to release from clips
   e. Remove back seat cushion.

Product Mounting Disclaimer
Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© copyright 2011 Gamber-Johnson, LLC

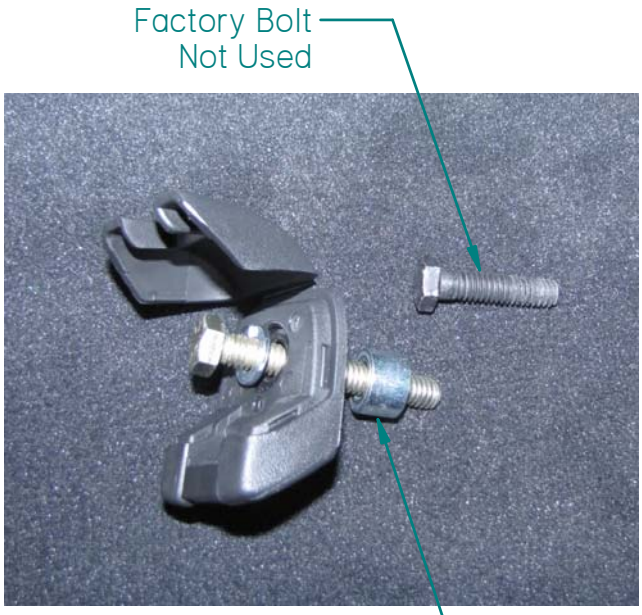

FIG. 1 - Replace Child Seat Anchors

FIG. 2 - Top Cross Bar Installation

Shelf Installation:

1. Using the supplied 1/4"-20 x.75" bolts, 1/4" lock washers and 1/4" flat washers, loosly assemble the Side Brackets to the Shelf Assembly (Fig 5).
2. From inside the trunk, install the Top Cross Bar using the supplied 5/16" washers and nylock nuts. **Note:** The Top Cross Bar has a traingular cutout that should point to the front of the car. **Caution:** Do not over tighten nuts as doing so may deform the Top Cross Bar.
3. Place shelf assembly in truck and hang on 1/4"-20 studs on ends of the Top Cross Bar (Fig. 2).
4. From inside cabin, place Backer Plate into outer most obround depression and use as a template to mark and drill two (2) 5/16" diameter holes per side (Fig 3). **Caution:** Check for cables, wire harness or other equipment before drilling into the vehicle
5. Using supplied 1/4"-20 x .75" bolts, 1/4" lock washers and 1/4" washers, bolt through Backer Plate, rear seat wall and into threaded inserts on back of Shelf Assembly rails (Fig 4).
6. Tighten Side Bracket hardware (3 per side).
7. Reinstall rear seat.

FIG. 3 - Drill Backer Plate Mounting Holes
Driver Side Shown

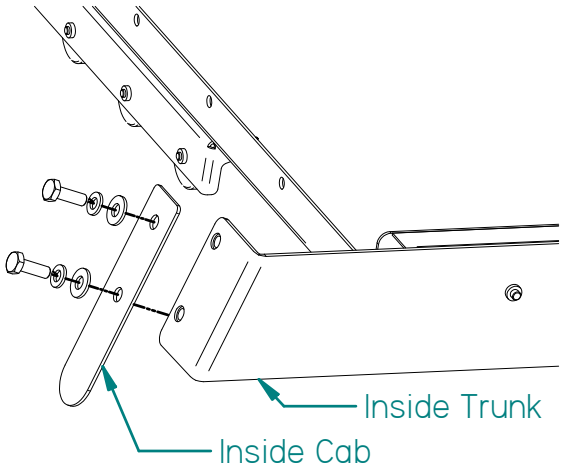

FIG. 4 - Backer Plate Hardware

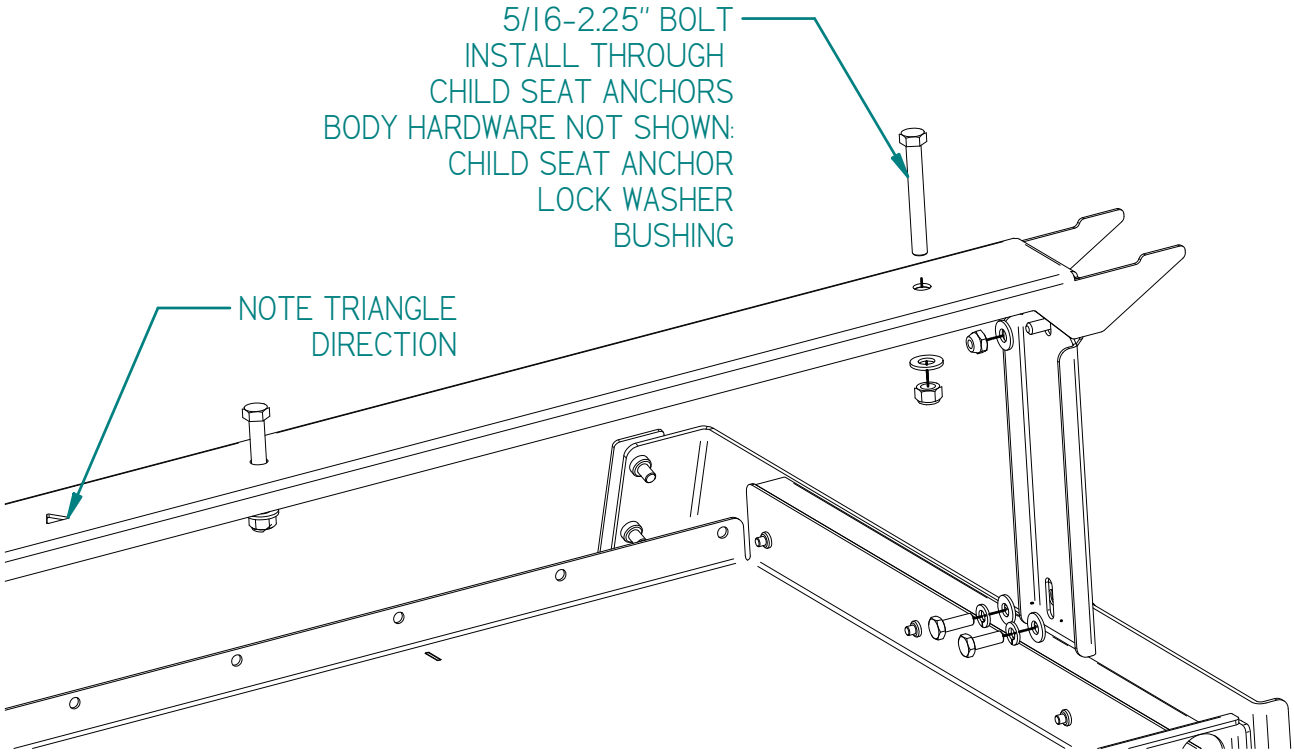

FIG. 5 - Mounting Hardware

Operation:
1. To open the shelf, press the lock button on the front of the shelf and pull shelf towards rear of vehicle.
2. Once the shelf is fully extended, magnets will help keep the shelf out when on a slight incline.
3. To close shelf, press shelf back to retracted position. **Caution:** Avoid getting fingers under front lip during closing. The shelf will latch automatically when fully retracted.
4. For additional security, the latch can be locked with the supplied keys.

Caution: To avoid damage to the shelf or items on the shelf, always ensure the shelf is retracted and latched before driving the vehicle.

Additonal Accessories:
To protect equipment on the shelf and retain any loose items, purchase and install the Shelf Rail (7160-0386). The Shelf Rail is installed into threaded inserts in the front of the shelf using hardware supplied with the Shelf Rail.